
ASSEMBLY INSTRUCTION


Ax1

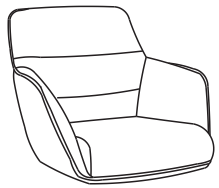


Ex1




1.

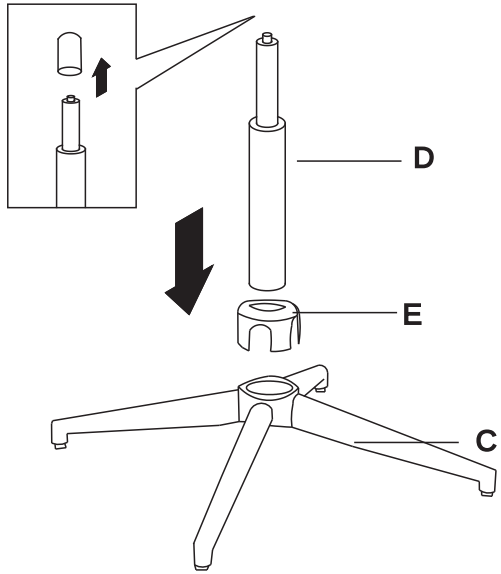


2.

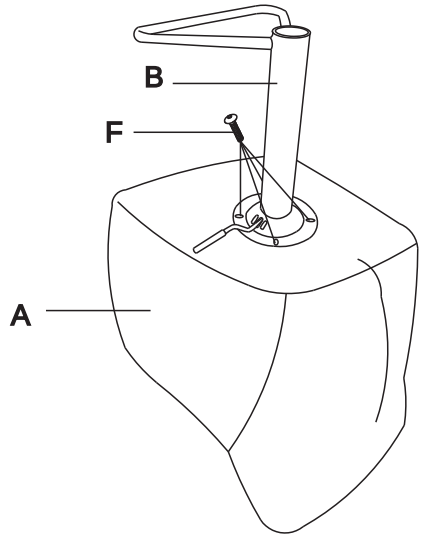

Bx1

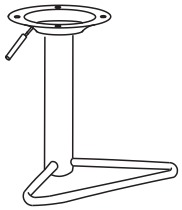


Fx4




M6x18mm


Cx1

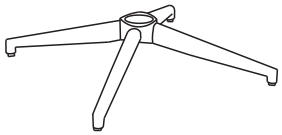

Gx1



3.

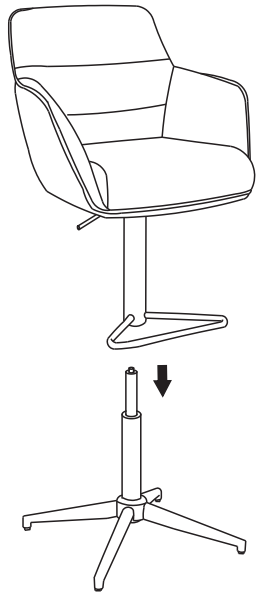

4.



Dx1

